



To access video files using a Micro SD card:

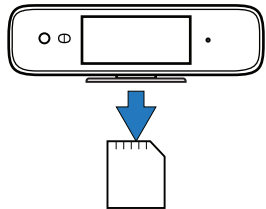


1. REMOVE SD CARD

Remove the Micro SD card from your camera.

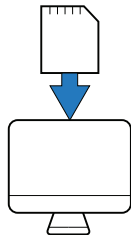


2. INSERT INTO COMPUTER

Insert it into your computer (use an adaptor if necessary).

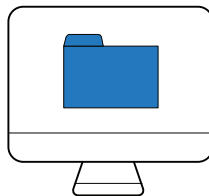

3. FILE EXPLORER

Open the file explorer on your PC.

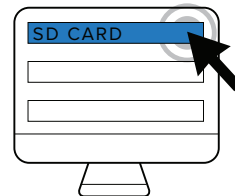


4. SELECT SD CARD

Double-click the SD card.
The raw video files will appear in the Videos folder.

DOWNLOADING CONTINUOUS TRIP VIDEOS


Your Camera captures continuous videos from both road and cabin-facing cameras while your vehicle is running. Want to review the full footage of your trip? Download your continuous videos to your computer.

To access video files using a micro USB cable:

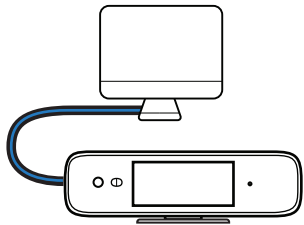

1. CONNECT

Connect your DCR to your PC using a micro USB cable.

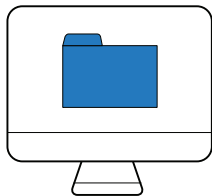

2. FILE EXPLORER

Once your Camera is connected and turned on, open the file explorer on your PC.



3. SELECT

Find your camera and select from the list.



4. INTERNAL STORAGE

Double-click Internal Storage. The raw video files will appear in the Videos folder.